

AURA



ZEN

AURA DIFFUSER

ZEN



SCENTWORKS (PTY) LTD

74 Kyalami Boulevard, Kyalami Business Park

Midrand, Gauteng

South Africa

www.scentworks.co.za

info@scentworks.co.za

SCENTWORKS WARRANTY

SCENTWORKS warrants our products against defects in materials and workmanship for a period of one year from the date of original purchase of this product. In order to pursue any remedy under this limited warranty please visit www.scentworks.co.za/warranty or email warranty@scentworks.co.za with your name, contact details and a copy of your receipt as proof of purchase. Only registered warranties will be accepted in case of returns, malfunctions and other claims for your device.

The SCENTWORKS limited warranty does not cover and damages, deterioration or malfunction resulting from any alteration, modification, improper use or maintenance, misuse, accident, exposure to excess moisture, fire, lightening, power surges, or other acts of nature. If you have received a product, which turns out to be defective we will arrange to collect the product from you at our cost.

Once we have inspected the product and validated your return SCENTWORKS Pty Ltd at its sole option, will provide one of the following three:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of charge for the necessary parts and labour to complete the repair and to restore this product to its proper operating condition.
2. Replace this product with a direct replacement or with a similar product deemed by ourselves to perform substantially the same function as the original product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under the limited warranty.

The maximum liability under this warranty is the retail purchase price paid for this item.

Corrosive oils such as Citronella may cause damage to the ceramic disc if left in the water tank when not operating the unit. Ensure you do not leave stagnant water in the device when not in use.

TABLE OF CONTENTS:

A .Specifications

B .Operating Instructions

C .Maintenance

D .Troubleshooting

FUNCTION

With cutting edge technology and sophisticated design this ultrasonic diffuser allows you to diffuse your chosen scent into the air transforming any space into a place of calm and relaxation.

Simply add a few drops of AURA fragrance oil into the water filled reservoir, replace the cover and gently push down on the top of the diffuser to switch the device on. The auto shut off feature when water levels run low gives you peace of mind.

To ensure longevity of your ultrasonic diffuser ensure you follow the maintenance guidelines and clean the unit every 2 weeks.



SPECIFICATIONS

Product name: AURA Zen

Product Size: Ø120MM, H147MM

Input Voltage: 100~240V/50~60Hz

Power: 12W

Water Capacity: 100ML

A. Glass Cover

B. Base

 
 
 
 
 
(Water Tank)

C. Adaptor

- 1. Ceramic disc
- 2. Max water level line
- 3. Air-Vent
- 4. Button

Push down on the top of the diffuser to switch it on or to change the mode.

Number of clicks	Mist	Light
Once	On, constant	Light on
Twice	30 sec on, 30 sec off	Light on
Three times	30 sec on, 30 sec off	Light off
Four times	Mist off	Light off

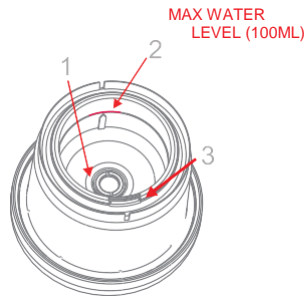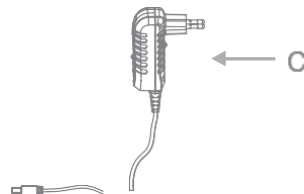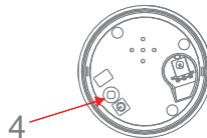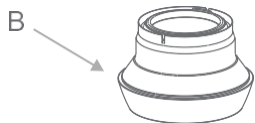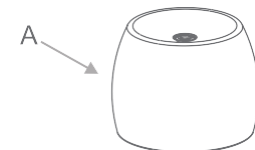




OPERATING INSTRUCTIONS

Important notes before use:


- A. Place the AURA scent diffuser on an even surface.
- B. Fill the water tank (100ml) with room temperature tap water.
- C. AURA fragrance oils are recommended for use in this diffuser.
- D. If the product is knocked over during operation, liquid may flow into the internal mechanism of the device. In the event that this happens unplug the device and pour out all the water.
- E. Stand the device upright and allow to dry for up to 3 days.

 DO NOT EXCEED
THE MAX WATER
LEVEL LINE

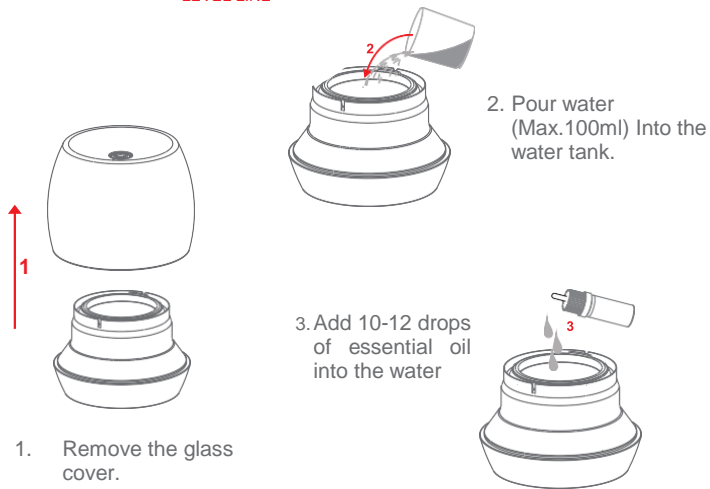




4. Put the cover back on.

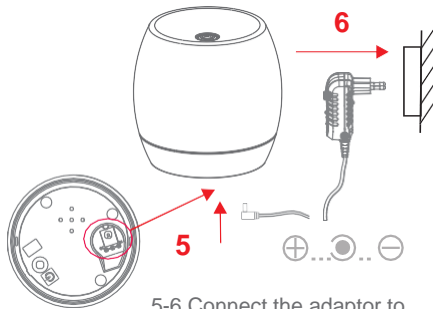


5-6. Connect the adaptor to the base and plug-in to the wall.

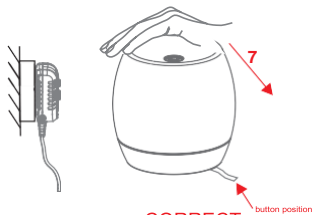


7. Press the power button and enjoy.




WRONG

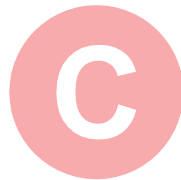


MAINTENANCE

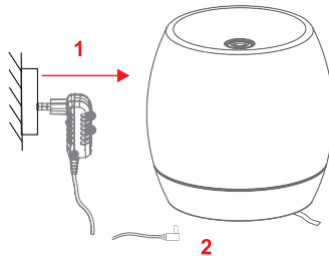

1-2. Turn off the unit and pull out the plug

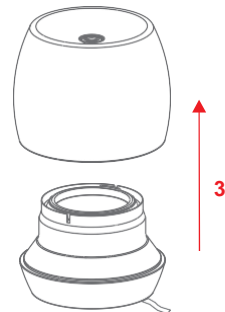


3. Remove the cover

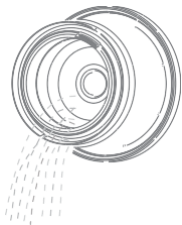

4. Empty water from the back of the tank carefully without allowing water to flow into the air vent.

5. Use a clean swab or cloth to clean the unit paying particular attention to the ceramic disc

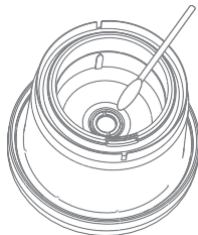

6. When not in use do not leave stagnant water inside the water tank. Gently dry the device and store safely.



TROUBLESHOOTING

Symptom	Possible Cause	Solution
No Mist	Power supply is not connected	Plug the power and press the button.
	Insufficient water	Fill enough water
	Overfill water(exceed 100ml)	Pour away the redundant water
	The cover is blocked by water drops or sundries	Clean with a swab and keep the exit being ventilated
	The ceramic disc ageing after operating for approx 3,000hours	Replace the ceramic disc.