

# AURA Nomad

## Users guide

Add to the tank tap water and your chosen essential oil. The ultrasonic vibrations then agitate the water and oil, which diffuses into the air. The process is flameless, smokeless and heatless so the health benefits of the oils remain intact. Please follow these simple instructions to maximize the effectiveness of this AURA product.

### INCLUDED

Main Unit

USB Wire: 5V DC

CE Adapter

### NAMES OF PARTS & SPECIFICATIONS


Product name: AURA Nomad

Product size: 112 x 130mm


Power: 5VDC

Water capacity: 100ml


Run time: 2 hours continuous, up to 2 hours intermittent

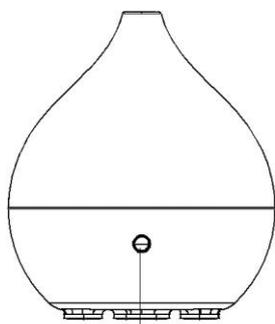


Power button

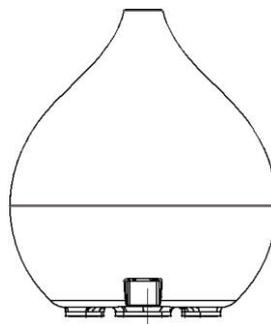

DC plug

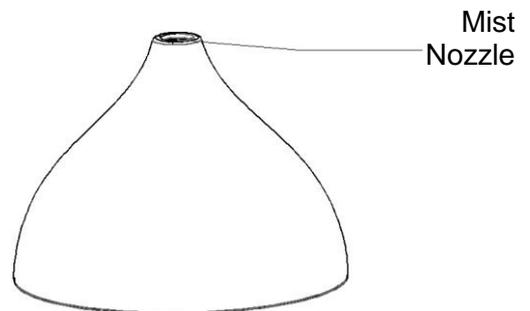


Mist Nozzle

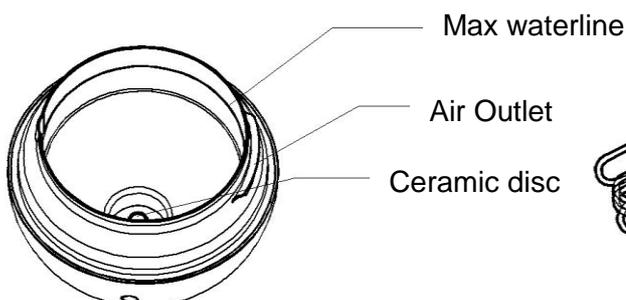


Max waterline

Air Outlet

Ceramic disc

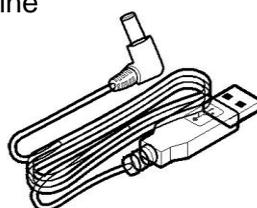


USB Wire

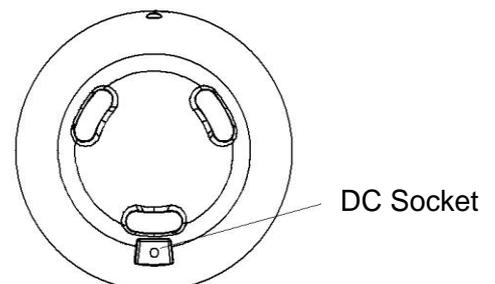


DC Socket

# OPERATING INSTRUCTIONS

Please open the top cover.

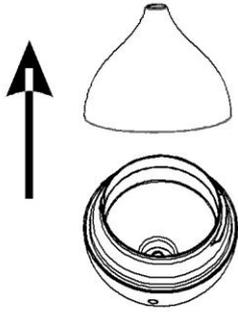


Pour water into the water tank

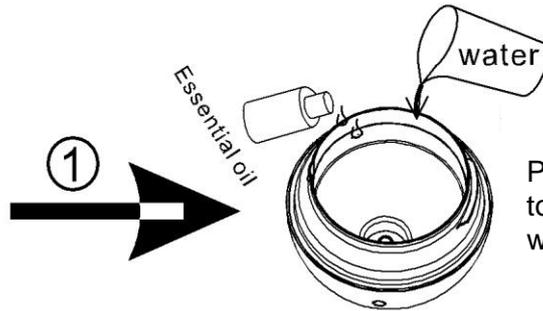


Please take care not to exceed the max water line

Insert the DC plug into socket.

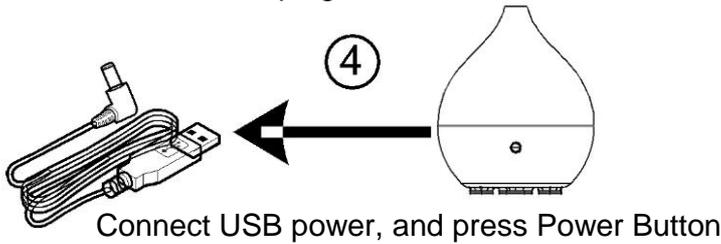

Close the cover

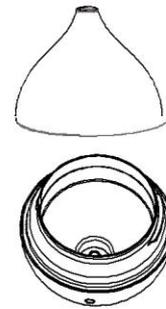

1. Remove top cover from the unit.
2. Fill the water tank with cold tap water up to the maximum water level. Then add your chosen essential oil, 5-10 drops depending on your required intensity.
3. Place the top cover of the unit back onto the main body.
4. Plug the adaptor into a power outlet. Then attach the other end of the cable into the DC jack.
5. Press the power button to turn the unit on. Press once for continuous mode and press twice for intermittent mode. Press a third time to turn the device off.
6. The device has a warm white LED light feature, which will function whilst the device is on.
7. The unit will stop emitting mist when the water tank is depleted. Simply unplug the device and add more water and essential oil if necessary.
8. When the unit is not in use unplug it, pour any remaining water out and wipe the device on the inside with a soft cloth or tissue.

## CARE & MAINTENANCE

1. Always unplug the device before performing any maintenance first removing from the wall outlet and then unplug the DC jack end.
2. Gently remove any possible mineral deposits from the mist outlet and the ceramic disc.
3. Use a small cotton swab/ear bud or soft cloth. Neither the mist outlet nor the ceramic plate should come into the contact with any hard objects.
4. Rinse the device with clean water and dry completely with a soft cloth before storing.
5. Change water daily when using frequently.
6. Do not use any liquid solvents to clean the electronic components as they may damage the unit.

### CAUTION

- **Do not operate the device without water.**
- **Avoid any spillage of water by keeping the unit upright at all times. Make sure the water tank is emptied when the device is not in use. Pour the water out from the side of the machine; avoid pouring water over the air outlet.**
- **Should any spillage occur please wipe up immediately.**
- **Corrosive oils such as Citronella may cause damage to the ceramic plate if left in the water tank when not operating the unit. To avoid this please ensure you do not leave water in the device when it is not operating.**

## WARNING

In case of any abnormal observations such as smoke, peculiar smells or noise, stop using the unit immediately to avoid the risk of an accident such as fire or electric shock. You should unplug the adaptor immediately and contact your local dealer. Never wrap the adaptor or Aroma Diffuser with cloth or paper, as blocking the ventilation could increase the risk of a fire. Never attempt to disassemble or repair the product. In case of internal inspection or repair becoming necessary, please contact your local dealer. Please keep the product out of the reach of children to avoid risk of any injury. Your Aroma Diffuser should be cleaned regularly and kept clean and dry when not in use.

### IMPORTANT!

Corrosive oils such as Citronella may cause damage to the ceramic disc if left in the reservoir when not operating the unit. This type of damage will not be covered under the warranty. This Aroma Diffuser must be cleaned after each use.

# WARRANTY

This SCENTWORKS limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, modification, improper use or maintenance, misuse, accident, exposure to excess moisture, fire, lightening, power surges, or other acts of nature.

This limited warranty last for one (1) year from the date of original purchase of this product. In order to pursue any remedy under this limited warranty, please visit [www.scentworks.co.za/warranty](http://www.scentworks.co.za/warranty) or email [warranty@scentworks.co.za](mailto:warranty@scentworks.co.za) with your name, contact details and a copy of your receipt.

Only registered warranties will be accepted in case of returns, malfunctions and other claims for your device.

Scentworks Pty Ltd at its sole option, will provide one of the following three;

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labour to complete the repair and restore this product to its proper operating condition.
2. Replace this product with a direct replacement or with a similar product deemed by ourselves to perform substantially the same function as the original product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

The maximum liability under this warranty is the retail purchase price paid for this item.